

HL-001 ASSEMBLY INSTRUCTIONS

PART LIST

- 1-MAST
- 1-BASE
- 2-CAP-TYPE NUT
- 2-SPRING WASHER
- 2-HEXAGON BOLT
- 2-NOT LOCK CASTER
- 2-LOCK CASTER

BOLTS ARE SCREWED
IN PLACE

